



TRICEL
CONSTRUCTION



GRP architrave overbox

(suitable for Tricel/ Medium permali and wavin boxes)

STOCK CODE: EB0025

INSTRUCTIONS

1. Clean the inside of the frame of existing meter box with a cloth. **See figure 1.**
2. Apply Silicon around the frame of the GRP Architrave Overbox. Put the nozzle of the cartridge touching the architrave edge. Apply a thick bead of silicon. **See Figure 2.**
3. Apply a thick bead of Silicon in the top and bottom corners. **See figure 3.**
4. Slide the GRP Architrave Overbox in place into the existing meter box (Check that the GRP Architrave Overbox is in its correct orientation). **See Figure 4.**
5. Drill 4 holes with a diameter 3.5mm drill bit in the moulded slots. **See Figure 5.**
6. Secure the GRP Architrave Overbox in place with self-tapping screws provided. **See Figure 6.**
7. Attach the meter box door to the GRP Architrave Overbox and close. **See Figure 7.**

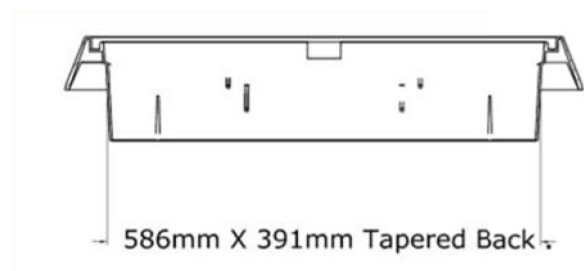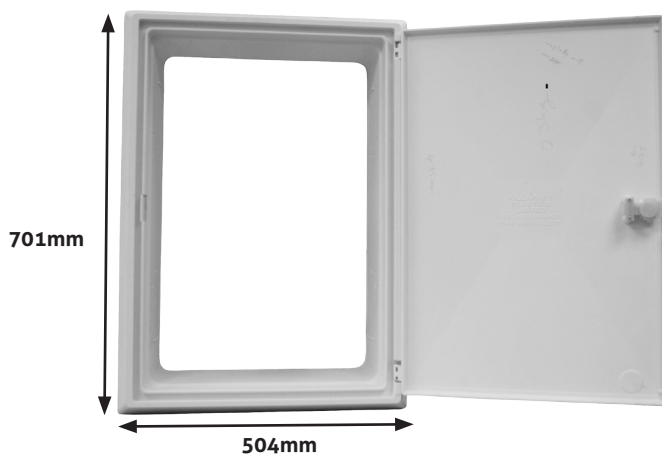

The GRP Architrave overbox contains the following: 1 x KP Frame, 1 x KP door, 1 x 310mm FS703 silicone, 1 x short reach ket, 4 x 3/4" screws, 130mm x expanded neoprene sponge & 1 x KP carton